LED FLOOD LIGHT INSTALLATION GUIDE



VOLTS	AC 100-240V /277V 50 /60Hz
PROTECTION CLASS	Class I (Default) /Class II
POWER FACTOR	>0.95
OPERATING TEMP.	-40°C ~ +50°C
BEAM ANGLE	25°,60°,90°,110° or Asymmetrical
HOUSING	High pressure die-cast aluminum Tempered glass
HOUSING COLOR	Gray (Default) / Black (available on request)
MOUNTING	Bracket mounted
Mounting Location	Wall /Pole /Floor /Ceiling
IP RATING	IP66
IK RATING	IK10
WARRANTY	5 years

Version	Nominal Wattage W	Fixture Dimension mm	Fixture Weight kg	Packing Type units /ctn	EPA m²
S	30 /40 /50	345 x226 x81	2.3(±0.1)	1	0.094
М	60 /80 /100 /120	447 x321 x90	4.4(±0.1)	1	0.172
L	150 /180 /200 /240	495 x378 x90	6.0(±0.1)	1	0.225
XL	320 /400	639 x507 x92	12.0(±0.1)	1	0.389

BRACKET MOUNTING & CONNECTION INSTRUCTIONS


- STEP 1: Open the packaging and check the product. In case of any damage, contact us.
- STEP 2: Adjust the flood light to direct the light in the desired direction before tightening the screws.
- STEP 3: Be sure to connect the cable correctly. Brown-Live, Blue- Neutral, Yellow/Green- -Ground.
- STEP 4: Switch the voltage on and check to see that the flood light works properly.

Maintenance: Toolless open clips of the light body then replace the LED or Driver (Except Version XL).

Recommended torque: 17Nm ± 1Nm (Version S /M /L)


Recommended torque: 6Nm ± 1Nm /29Nm ± 1Nm (Version XL)




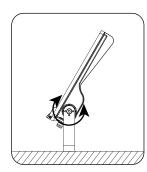






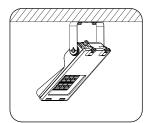

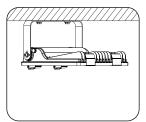

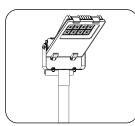

CAUTION

- Installation and maintenance must be performed by professionals only.
- Please ensure the holder is strong enough and the screws are tightened.
- The ground wire must be securely connected.
- Please make sure the lamp is working with correct input voltage.

- Cut off the power before maintenance.
- Do not use chemicals or corrosive cleaner to clean the fixture.
- If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by qualfied person in order to avoid a hazard.